


LM700 來電顯示測試器 使用說明

1. 圖示

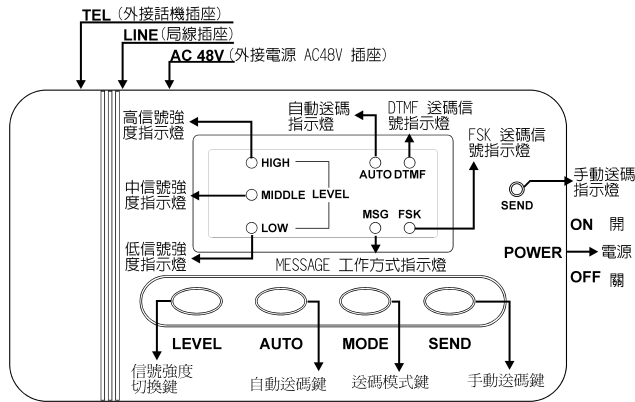

1

- 從 DC 座插入電源(DC 或 AC)18V 或從電池扣接入 9VDC 電源，將[POWER]開關置於“ON”。
- 如需使用電話測試儀，則只能從“LINE”端口接線到測試儀，從測試儀並聯接線到待測話機。如不需使用電話測試儀，可直接從“TEL”端口接線至待測話機(必須從 DC 座接入 48V 電源)。
- 用[LEVEL]按鈕選擇發送信號電平。
按[LEVEL]按鈕，可以設定發送信號電平為高(-10DB)，中(-20DB)，低(-30DB)，指示燈“HIGH”，“MIDDLE”，“LOW”分別亮作相應指示。
- 按[AUTO]按鈕，可以設定為自動/手動送碼或送 message 三種工作方式，指示燈“AUTO”亮，指示自動送碼狀態；“MSG”亮，指示 message 工作方式，按[SEND]按鈕傳送 message：“--50--” “--51--”輪流傳送，“--51--”出現“☑”符號；“--50--”符號“☑”消失；“AUTO”和“MSG”兩個燈同時滅，則指示手動送碼工作方式，按[SEND]按鈕送碼。


2

- [MODE]送碼模式選擇開關
按[MODE]按鈕，可以設定三種送碼方式分別為DTMF，FSK；還有一種是DTMF和FSK兩種信號格式輪流傳送。“DTMF”燈亮指示送碼為DTMF信號格式，可按以上送碼方式，送第一個號碼，LCD顯示:0123456789，送第二個號碼，LCD顯示號碼加1:0123456790，以後送碼依次加1。“FSK”燈亮，指示送碼為FSK信號格式，可按以上送碼方式，送第一個號碼，LCD顯示:1234567890，送第二個號碼，LCD顯示號碼加1:1234567891，以後送碼依次加1。“DTMF”和“FSK”燈同時亮，則指示兩種信號格式輪流傳送。
- [SEND]手動送碼按鈕。
- [SEND]燈每閃爍一次，指示傳送一次碼。

3

LM700 CALL ID SIMULATOR USER'S MANUAL

1. FIGURE

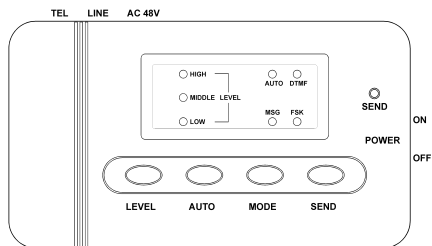

- Plus the (DC or AC)48V power from DC jack, or connect 9VDC power to battery hasp, [POWER] switch set to “ON”。
- Connect the “LINE” jack to the tester if it needs to use tester of the telephone, parallel Connect the tester to need test telephone. if it not needs to use tester of the telephone and direct connect the

4

- “TEL” jack to need test telephone(must connect the DC jack to 48V power)。
- Press [LEVEL] button for select to send signal voltage。
Press [LEVEL] button for setting send signal voltage is high(-10DB), middle(-20DB), low(-30DB)。the indicator “HIGH”, “MIDDLE”, “LOW” correspondingly light。
- Press [AUTO] button, setting automatic/manual send code or send message, the “AUTO” indicator light, indicate automatic send code status; “MSG” light, indicate message status, press [SEND] button to send message; “--50--” “--51--” send in rotation, “--51--” appear icon “☑”; “--50--” the icon “☑” disappear; the “AUTO” and “MSG” indicator is disappear at the same time, indicate manual send code, press [SEND] button to send code。
- [MODE] button for sending code mode select switch

5

- Press [MODE] button for setting send code system: DTMF, FSKD, DTMF and FSK。the “DTMF” indicator light to indicate to send code is DTMF system。Refer send code way, send the first number, LCD display:0123456789, send the second number, displayed number add 1 on LCD :0123456790, later send code add 1 in sequence。The “FSK” indicator light to indicate to send code is FSK system。Refer send code way, send the first number, LCD display: 1234567890, send the second number, displayed number add 1 on LCD :1234567891, later send code add 1 in sequence; the “DTMF” and “FSK” indicator light at the same time, and indicate two kinds of signal system send in rotation。
- [SEND] button for manual send code。
- The “SEND” indicator flash once to indicate send code once。

6